# T38 Handheld device Use manual

## **T38 Overview**



1 Front camera	11 Speaker
2 Microphone	12 Antenna
3 Light sensor	13 Dock connector
4 Return key	14 Power
5 Home key	15 Collection key
6 The menu	16 'S' key
7 Touch screen	17 Headset Jack
8 Flash light	18 Volume button
9 Rear camera	19 Collection key
10 Battery cover	20 Micro USB port

### **Battery and back cover**

**Step 1**Unscrew the D shape handle knob



**Step 2:** Pull out the battery by the recess holes



**Step 3:** Pull the battery strip to remove the battery



**Step 4:** Insert the battery make sure the battery pins are connected to the probe




**Step 5:**Cover up the back by fitting the bar into the notch, then tighten the screws.






#### Insert SIM card and SD card

Remove the battery back and take out the battery, then you will see the slots for SIM card and the SD card.

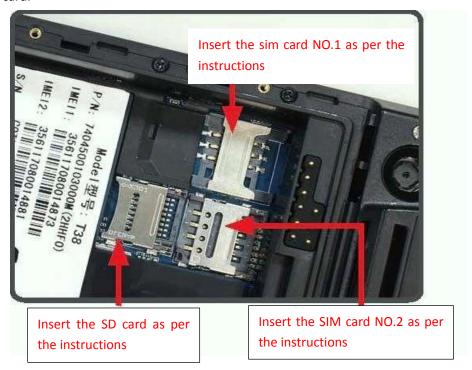

## **Charging and data transfer**

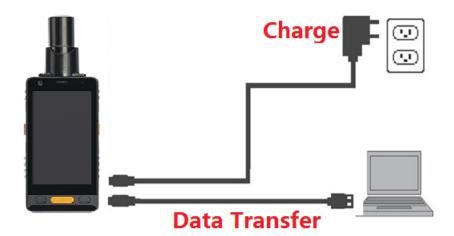

## **Packaging content**

standard fitting	picture	quantity	explain
Host antenna		1	Built in highprecision gnss module
wristband		1	High precision four helix antenna
strap	N	1	
Usb cable		1	Microusb nterface
Power adaper		1	5V/2A Chinese plug
battery	The season of th	1	3.7V/4000mAh
screwdiver	0	1	

#### Remarks

- 1. Please replace the battery with the batteries of the same model to prevent explosion.
- 2. Dispose of the wasted battery by the local regulations.
- 3. Do not disassemble or damage the battery.
- 4. Do not expose the battery to high heat, fire or direct sunlight.
- 5. Do not touch the skin and the eyes after touching a leaking battery. Wash the skin and the eyes with water should they are in contact with the leaking battery.
- 6. Charge the battery before use. The charger of this product allows an input voltage 5V/2A. Please do use the charger included in the kit.
- 7. The working temperature of this product is 0°C~ 40°C.
- 8. To reduce the electromagnetic radiation, please use this product for its intended use.
- 9. Children under age two are not recommended to watch the screen. Children older than two years old are not recommended to watch the screen longer than one hour. Take a ten minute break after watching the screen for half an hour.